



Cat. No. 60-1157

Wire-Controlled Sparkle Beach™ Barbie® Sun Rider

INSTALLING BATTERIES

Your Sun Rider requires four C batteries. We recommend alkaline batteries, such as RadioShack Cat. No. 23-551.

Cautions:

- Use only fresh batteries of the required size and type.
- Never leave dead or weak batteries in the Sun Rider.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or nickel-cadmium), or rechargeable batteries of different capacities.
- Dispose of batteries properly; do not bury or burn them.

GETTING IT READY

To attach the handlebars, press the handlebars into the hole above the front wheels.

Place the decals on the Sun Rider in the locations shown.

illus

illus

1. Pull the tabs up and lift off the battery compartment cover.
2. Match the + and – marks.
3. Replace the cover and make sure it is secure.

DRIVING THE RIDER

Warning: Never play with the Sun Rider in the street.

Note: Be sure to fasten Barbie's seat belt and put on her safety helmet when you have Barbie in her Rider.

© 1996 Tandy Corporation.
All Rights Reserved.

RadioShack is a trademark used by Tandy Corporation.
Barbie and Associated Trademarks are owned by Mattel, Inc.
© 1996 Mattel, Inc.

Manufactured for RadioShack by Arcotoys, Inc. A Mattel Company.

Press s. The Sun Rider goes forward in a straight line and pops a wheelie.

Illus

Press t. The Sun Rider goes backward in a circle.

Illus

Note: The Sun Rider stops when it runs into something. Press t to turn it around, or move it by hand.

CARE AND MAINTENANCE

 
 
To enjoy your Sun Rider for a long time:

- If the Sun Rider will not be used for several days, remove the batteries.
- If your Sun Rider moves slowly, or does not move at all, replace the batteries with fresh ones.
- Keep it out of dirt and water.
- Don't drive it on the carpet.
- Clean it with a damp cloth to keep it looking good.
- Don't take it apart! If something is wrong with it, take it to your local RadioShack store for help.

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

6A6


Printed in Hong Kong



RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

6A6

 Printed in Hong Kong



RadioShack Limited Warranty

This product is warranted against defects for 90 days from date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. Within this period, we will repair it without charge for parts and labor. Simply **bring your RadioShack sales slip** as proof of purchase date to any RadioShack store. Warranty does not cover transportation costs. Nor does it cover a product subjected to misuse or accidental damage. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

We Service What We Sell 10/95

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

6A6

Printed in Hong Kong